

# **USB to RS232 485** serial port pin module

I. Product Description With the continuous development of PC devices, USB interfaces are gradually replacing

various low-speed peripheral interfaces of old PCs. However, many important devices in the current industrial environment still use RS485 interface design, so many users use

Please read the product manual carefully before using the product.

### USB to RS232/485 converters to achieve this. Data transmission between PC and RS232/485 device. This universal USB to RS232/485 converter does not require an

external power supply and is compatible with the RS232/485 standard. It can convert single-ended USB signals into RS232/485 signals. The converter has a zero-delay automatic transceiver conversion chip inside, which is unique The I/O circuit automatically controls the direction of data flow. It can realize half-duplex (RS485) mode conversion and full-duplex (RS232) mode conversion, plug and play, ensuring that it is suitable for all existing communication software and interface hardware. Products are widely used in industrial automation control systems, access control systems, attendance systems, card swiping systems, building automation systems, power systems, and data acquisition systems. II. Specifications  $1.\ \mathsf{A}\ \mathsf{USB}\ \mathsf{to}\ \mathsf{RS232}\ \mathsf{485}\ \mathsf{serial}\ \mathsf{communication}\ \mathsf{module}, \mathsf{a}\ \mathsf{product}\ \mathsf{suitable}\ \mathsf{for}\ \mathsf{industrial}$ equipment communication.

### 3. RS232 communication baud rate reaches 460800bps, full-duplex communication mode.

4. RS485 communication baud rate reaches 10Mbps, half-duplex communication

2. Full-speed USB device interface design, compatible with USB V2.0/V1.1.

- 5. The product supports output voltages of 3.3V and 5V, and has a signal indicator light for sending and receiving signals to control the communication status. 6. Circuit integrated ESD protection:  $\pm 20$ KV IEC1000-4-2 air gap discharge,
- 7. The product is suitable for industrial equipment such as cash register systems, card readers, CNC machine tools, and cutting plotters.

 $\pm 15$ KV IEC1000-4-2 contact discharge.

Illustrate

RS485 signal data transmission

RS485 signal data reception

(6) (4)

compute

USB

8. Support Win xp/Win7 and above/Mac 10.15 and above/Linux operating system.

- III. Interface Description


Number


1


Ports and

other definitions

RS485\_A RS485 B

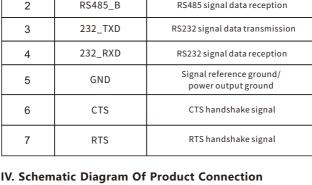

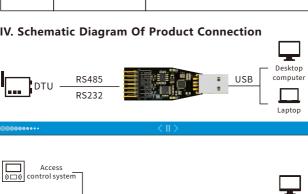

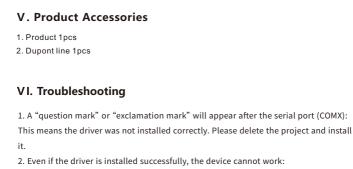

If the adapter is installed on COM5, reassign it to COM1, 2, 3 or 4. It is possible that the computer only scans a limited number of COM ports (e.g. 3 or 4) and therefore the

#### computer does not recognize the COM5 port with this limitation until the COM port is reassigned. 3. Data communication failed:

4. Data loss or error:

equipment are consistent.

through the official website.

MS3020drive.zip

1. Windows 2. MacOS

Check whether the USB interface wiring is correct. Check whether the TTL output interface wiring is correct. Check whether the terminal blocks are well connected.

Charging system

RS485

RS232

VII. MS series serial port line driver operation guide Scan the QR code included with the product to download and install the driver

Check whether the data rates and formats at both ends of the data communication

Step 1: Download the driver installation package, click on the MS3020drive.zip compressed package, and decompress it. 类型

Step 2: After decompression, as shown in the figure below, enter the Windows folder

and double-click the application with the windows suffix.


2023/8/29 11:35 360圧縮 ZIP 文件 67,559 KB

大小

3. Android&Linux Driver 2023/8/29 13:43 文件央 类型 大小 Ψ MS\_USBSerial\_windows\_v1.0.2.11.1.exe 2023/8/24 17:52

Ψ MS\_USBSerial\_xp\_v1.0.2.11.1.exe 2023/8/24 18:45

Step 3: The installation dialog box pops up, click Next and Install until completed.

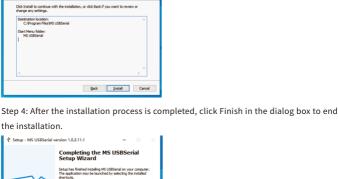


If Win7 and Server2008 drivers still display signature errors (yellow marks), you need

windows6.1-kb4474419-v3-x64.msu, windows6.1-kb4490628-x64.msu, you need to restart the computer after installing the patch. The patch directory is "Win7 Server

Install this driver software anyway Only install driver software obtained from your manufacturer's website or disc. Unsigned software from other sources may harm your computer or ste information.

Model: Date of purchasel:

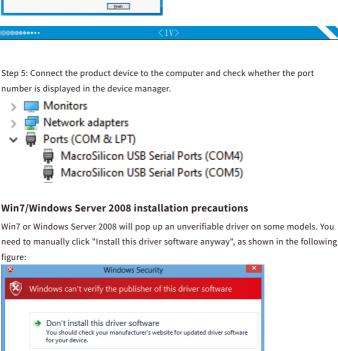

## **Customer Information**

## User address: Distributor:

User telephone:

Agen User

Inten

**♥** See details

2008 Patch".

to install two Win7 patches:

ncy address:				
telephone:		Dealer stamp valid		mp valid
nance Records				
ir times	Date	Fault	Treatment measures	Repair work NO.

**Product Warranty Card** 

Electronic products are guaranteed for one year, and other products are guaranteed